

iTaste CLK 1280说明书

尺寸: 56*96mm

封面材质: 157g 双铜板纸单面过哑胶



内页材质: 128g 双铜纸双面印刷

装订方式: 胶装



CE FCC



user manual

itaste CLK 1280



Welcome to the iTaste CLK 1280

A precise & powerful Advanced Starter Personal Vaporizer from Innokin Technology utilizing Variable Voltage and 'Vape While Charging' Passthrough Technology.

Congratulations on purchasing this original iTaste CLK 1280 & Welcome to the Future.

First of all, please ensure that your iTaste CLK 1280 is a Real Innokin product.

To verify that this iTaste CLK 1280 is a real Innokin Technology device please:

- 1) Locate and Scratch to reveal your iTaste CLK 1280 Unique Authorization number which is included on a label on the reverse of the packaging.
- 2) Visit the Official Innokin Technology website at <http://www.Innokin.com>.
- 3) Enter the Unique Authentication number in the Authentication field.
- 4) Verify your iTaste CLK 1280 is a Real Innokin.



If you have any questions or suggestions we would like to invite you to please write to us at Support@innokin.com. We are looking forward to hearing from you. Join our Innokin FaceBook Page: www.facebook.com/Innokin.Technology for the latest information and to win great prizes!!

WARNING:

Please read this section carefully to ensure you receive maximum benefits from your iTaste CLK 1280 and enjoy vaping with it in the most safe and effective ways possible.


1. This Advanced Personal Vaporizer may be used with e-liquids that contain nicotine. **Please check with your e-liquid provider.** This product is only intended for use by adults of legal smoking age (18+) and should not be used by children, women who are pregnant or breastfeeding, or persons with or at risk of heart disease, high blood pressure, diabetes or taking medicine for depression or asthma, or who otherwise may be sensitive to nicotine. Nicotine is addictive and habit forming, and it is very toxic by inhalation, in contact with the skin or eyes, or if swallowed. Ingestion of the non-vaporized concentrated e-liquid ingredients can be poisonous. Keep away from children and pets.
2. This Advanced Personal Vaporizer may be used with e-liquids that contain nicotine, a chemical known to the State of California to cause birth defects or other reproductive harm. **Please check with your e-liquid provider. (For products sold in California.)**

3. This Advanced Personal Vaporizer is only designed to be used with high quality e-liquid. **Please check with your e-liquid provider.** This device is not intended for use with loose tobacco leaf or herbal substances.
4. This Advanced Personal Vaporizer has not been evaluated by the Food and Drug Administration and is not intended to treat, mitigate, prevent or cure any disease or condition. This product is not intended for use as a smoking cessation device.
5. This product is intended for use with the charger provided with the unit. We recommend you always use a high quality 5V 500mA USB wall charger (CE/UL Certified). Use of unauthorized chargers may lead to overheating and possible burning of items in contact with the unit. Innokin Technology is not responsible for battery and charger explosions, fires or malfunctions due to the use of a low-quality charger. This product does not come included with any wall charger.
6. This Advanced Personal Vaporizer does not come included with car charger or car charger adapter. This device is not designed for use with a car charger. Use of unauthorized chargers may lead to overheating and possible burning of items in contact with the unit.

- 
- 
7. All empty clearomizers must be disposed of properly and out the reach of children and pets.
 8. This Advanced Personal Vaporizer includes small parts such as the mouth piece. Always keep any small parts out of reach of children and pets to prevent swallowing or other harm.
 9. Obey local laws or regulations regarding Electronic Cigarettes when vaping. If you are in an area where there are any bans or potential dangers, please do not use your Advanced Personal Vaporizer.
 10. Do not misuse, mishandle or store your Advanced Personal Vaporizer improperly. Even though it is made of high quality stainless steel it may become damaged when dropped or otherwise mishandled.
 11. Do not drop, throw, or mishandle your Advanced Personal Vaporizer as the outer shell or inner components may become damaged. If the shell of the device becomes damaged or the structural integrity of the battery becomes compromised, discontinue use immediately and contact your Authorized Innokin Technology Vendor.
 12. In order to prolong the operation of your Advanced Personal Vaporizer,

- please do not place or store in excessively hot or cold environments.
13. Your Advanced Personal Vaporizer is not waterproof. Keep it dry at all times. Do not submerge this device or expose it to moisture.
14. Keep your Advanced Personal Vaporizer away from sources of excessive heat or cold as damage may occur.
15. Do not attempt to repair the unit by yourself as damage or personal injury may occur.
16. In order to guarantee the normal functioning of your Advanced Personal Vaporizer, and maximize the pleasure of vaping, we strongly advise that you charge the battery when the power level drops below 10 percent.
17. Do not leave the battery depleted for long periods of time between recharging or the battery capacity may be decreased.
18. Do not leave this device unattended while charging.
19. If the device becomes excessively hot, discontinue use immediately and contact your Authorized Innokin Technology Vendor.
20. If the device will not power off, discontinue use immediately and contact your Authorized Innokin Technology Vendor.

21. If the device functions in a way which is not stated in the manual contact your Authorized Innokin Technology Vendor.
22. As this device has an internal Lithium Ion Battery, the lifespan of the product will be limited.

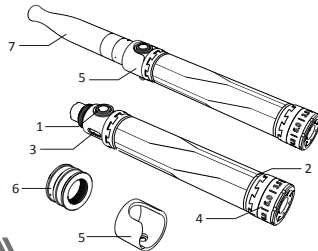

- 1 Firing button
2. Voltage Indicator
3. Micro USB socket
4. Rotational wheel voltage selector
5. Lanyard ring
6. Beauty ring
7. Clearomizer (not included)

The Primary Features of The iTaste CLK 1280:

Battery Level Indicator:

The iTaste CLK 1280 battery capacity is displayed via green, yellow and red LED lights.

Green = Fully Charged



Yellow = Half Power.

Red = Low Power. Please Charge.

Large battery capacity:

The iTaste CLK 1280 has a built-in 1280 mAh polymer Li-Ion rechargeable battery.

ON/OFF battery switch:

Press the power button “” three times in rapid succession to turn on the iTaste CLK 1280. Once the iTaste CLK 1280 is on hold down the power button to activate the atomizer and vape. When the iTaste CLK 1280 is not in use press the power button “” three times in succession to power off the iTaste CLK 1280 Advanced

Personal Vaporizer. Always power off the iTaste CLK 1280 Advanced Personal Vaporizer when it is not being used, or when it is going to be stored in a pocket, bag or purse.

SAFETY:

10 second cutoff:

If the activation button is held for 10 seconds or longer, the iTaste CLK 1280 Advanced Personal Vaporizer will stop firing until the button is released and pressed again.

Short Circuit/Atomizer Protection:

Short Circuit/Atomizer Protection protects the iTaste CLK 1280 Advanced Personal Vaporizer against shorted atomizers and will stop the unit from functioning in unsafe conditions.

Over-Discharge Protection:

The iTaste CLK 1280 Advanced Personal Vaporizer monitors the battery voltage and will automatically power off when the battery is discharged.

High compatibility 510 connector:

Threads are compatible with the following clearomizers: iClear16, iClear16B, iClear16D, iClear30, iClear30B, iClear30s, iClearX.I. and more.

OPERATION GUIDE

To POWER ON the iTaste CLK 1280 :

Pressing the power button “⏻” three times in rapid succession will power on the iTaste CLK 1280 Advanced Personal Vaporizer. The main LED light will blink from red to yellow to green, after which the iTaste CLK 1280 Advanced Personal Vaporizer will enter standby mode. The final color of the LED will indicate the current power level.

When the iTaste CLK 1280 Advanced Personal Vaporizer has been powered on, hold the button down to activate the unit. The color of the LED when the button is pressed indicates the current power level.

Low Voltage Warning

The Red LED will continue blinking for eight seconds when battery capacity is lower than 3.3V and the iTaste CLK 1280 Advanced Personal Vaporizer will automatically power off.


Battery Capacity Display

The main LED light will display green to indicate full battery charge, yellow to indicate half capacity and red to indicate immediate charging is required.



To POWER OFF the iTaste CLK 1280 :

Press the “⏻” button three times in succession to power off your iTaste CLK 1280 Advanced Personal Vaporizer.

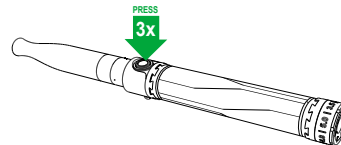

Short Circuit

The Red LED light will remain lit for five seconds if a load short circuit is detected, after which no vapor will be produced. Check the device carefully to determine the cause of the short circuit. If the cause of the short circuit cannot be detected contact your authorized Innokin vendor for more information.


To assemble your iTaste CLK 1280 Advanced Personal Vaporizer:

1) Carefully refill your clearomizer (not included) to a correct level.



Please wait 5-10 seconds to allow for the atomizer wicks to absorb the e-juice.

2) Screw the filled clearomizer (not included) onto battery

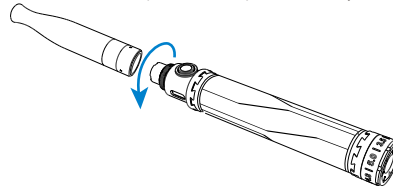


Congratulations!

Your iTaste CLK 1280 is now ready to be vaped and enjoyed.




To charge the iTaste CLK 1280 battery with the provided Micro USB cable use a high quality wall socket adapter or a computer USB port.
The iTaste CLK 1280 is a passthrough device and can be vaped as it is charging.



The main iTaste CLK 1280 battery LED power light will blink from red to yellow to green, after which the iTaste CLK 1280 battery will enter standby mode. The final LED color will indicate the current power level.
The main LED light will display green to indicate a full battery charge, yellow to indicate power is at half capacity and red to indicate immediate charging is required.

Red LED light = battery voltage is lower than 3.6V
Yellow LED light = battery voltage is around 3.6V-3.75V
Green LED light = battery voltage is higher than 3.75V

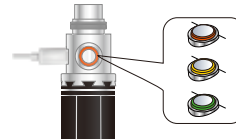


PLEASE NOTE:

The Red LED will blink for eight seconds when battery capacity is lower than 3.3V and the iTaste CLK 1280 will automatically power off.
If a load short circuit is detected the Red LED light will stay lit for five seconds,

after which no vapor will be produced. If the voltage wheel has not been clicked securely into a selected voltage position then the LED will flash red 6 times. If the RED light remains lit for more than five seconds, and your device is within the 3 month warranty period, please contact your authorized Innokin Technology vendor for warranty details.

When the iTaste CLK 1280 battery is fully charged the LED light on the firing button will turn green and power off.

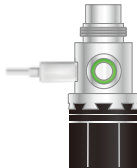

Technical Specifications: ***Variable Voltage***

The rotational wheel adjusts voltage in the following increments:

3.5, 3.8, 4.0, 4.3, 4.5, 4.8, 5.0 The red LED will blink six times and turn off if the rotational wheel is not in place.

To set your desired voltage turn the rotational wheel to the left or right until you hear an audible click.

When adjusting the voltage with the rotational wheel always check to ensure the wheel is set to your desired voltage.

Standby current: 50uA max

Maximum output current: 3.5A

Maximum output wattage: 15W

Clearomizer Resistance: 1.2 ohm (minimum), recommendation 2.5Ohm

Battery: Built-in 1280 mAh polymer Li-Ion rechargeable battery.

Charging: Micro USB DC5V/500mA

Short Circuit Protection: 0.6 +/-0.2 ohm

WARRANTY INFORMATION

Innokin Technology provides a three month after sales service warranty to all of our authorized vendors.

Please consult your Authorized Innokin Technology Vendor for more information and terms of service.

Innokin's warranty does not apply to products purchased through third-party vendors. To ensure you buy real Innokin products, and take advantage of our after sales service warranty, only buy from Authorized Innokin Technology Vendors.